
Anniversary layered paper scene

ex2-1359 / LETTER / Back layer / 160 mm wide

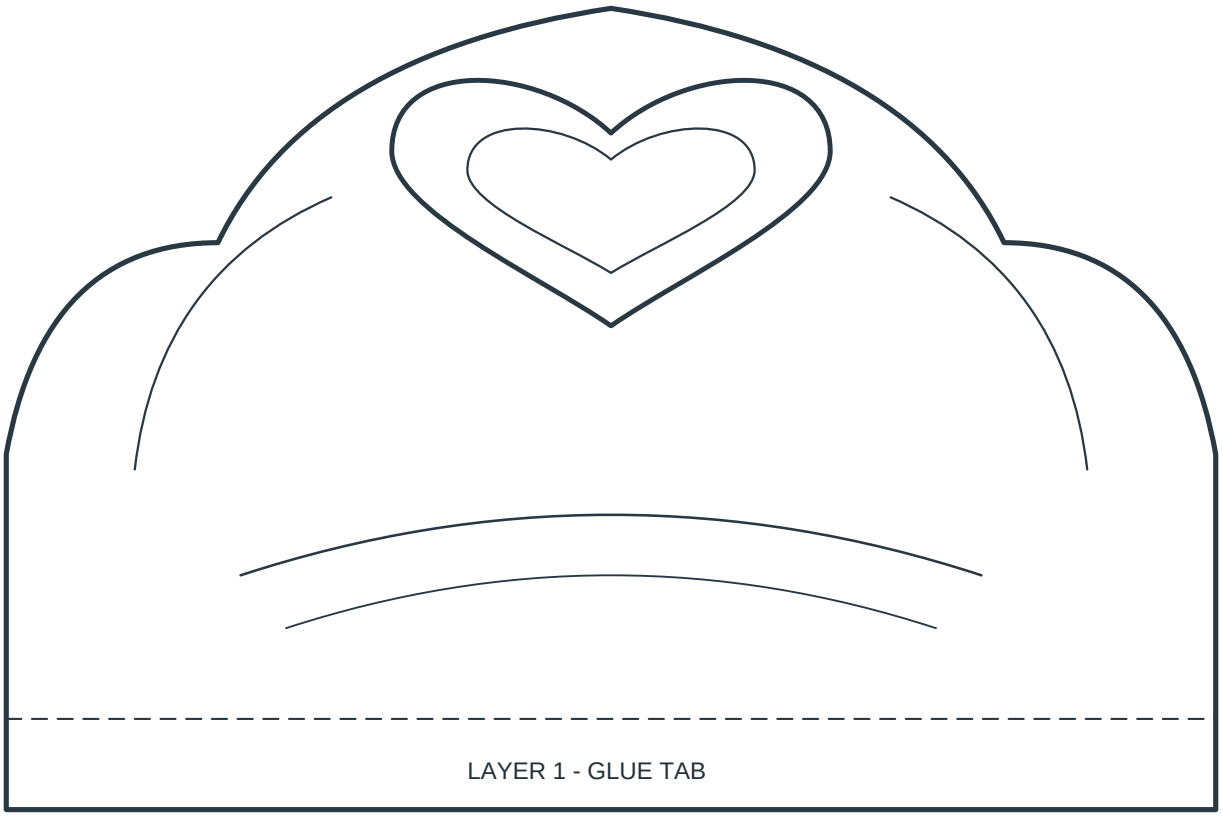


Cut outer contour only. Dashed baseline folds toward the back.

50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Anniversary layered paper scene

ex2-1359 / LETTER / Middle layer / 160 mm wide

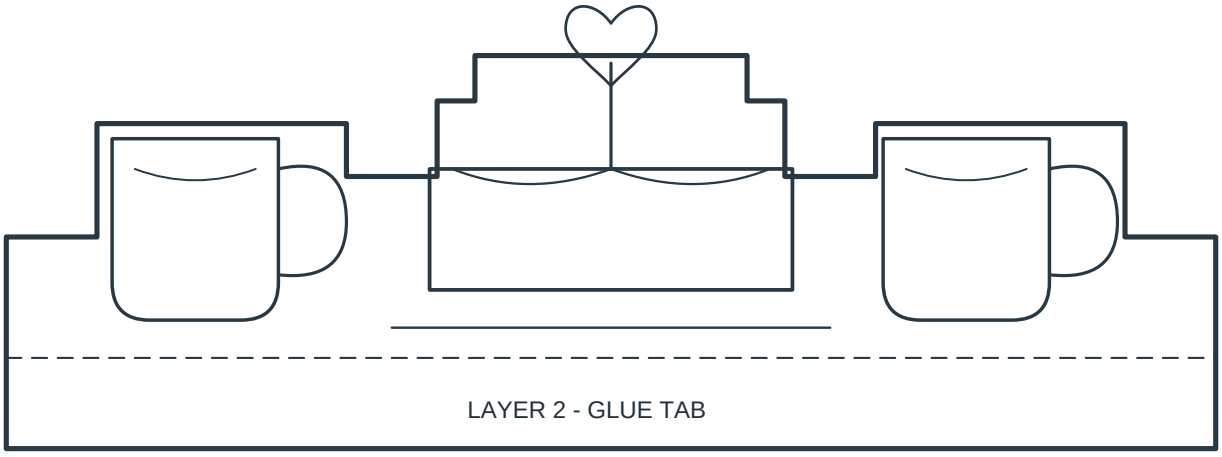


Cut outer contour only. Dashed baseline folds toward the back.

50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Anniversary layered paper scene

ex2-1359 / LETTER / Front layer / 160 mm wide

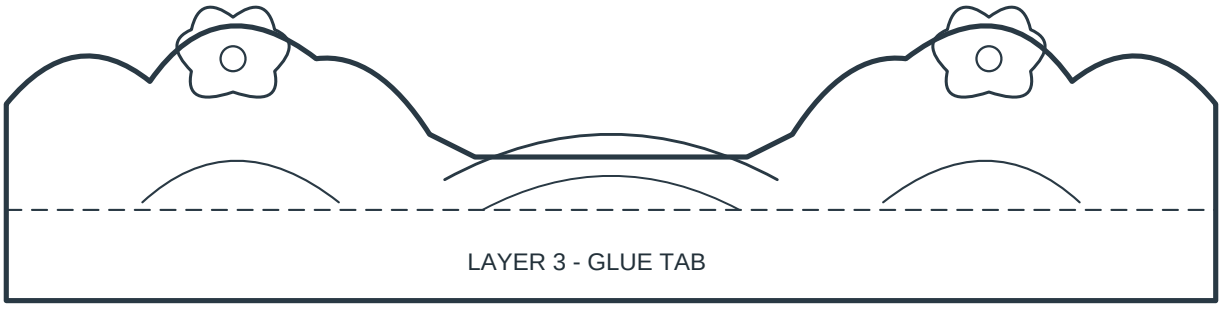


Cut outer contour only. Dashed baseline folds toward the back.

50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Anniversary layered paper scene

ex2-1359 / LETTER / Base board / 176 x 120 mm

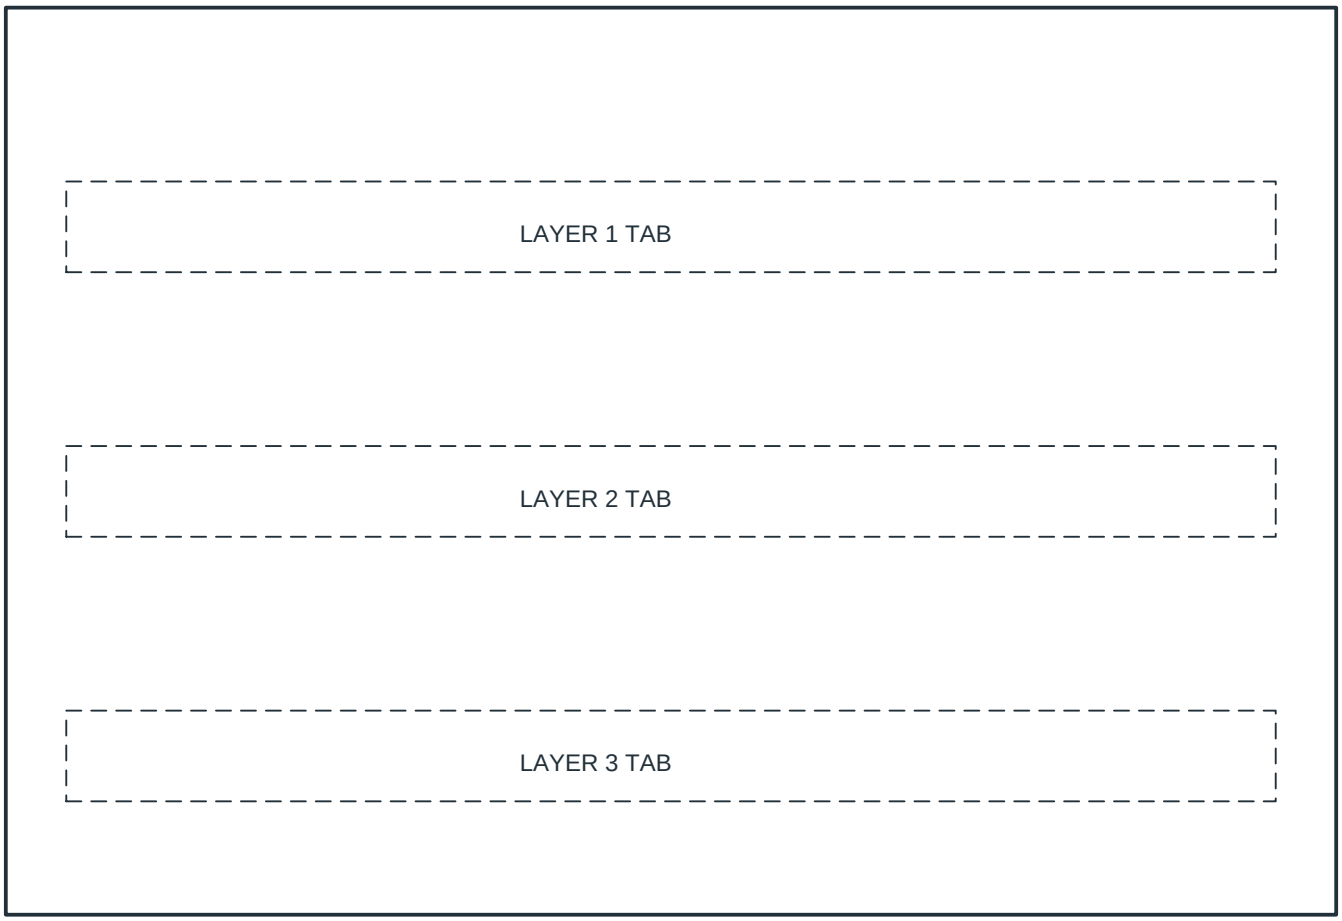

Front edge

50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Anniversary layered paper scene

ex2-1359 / LETTER / Instructions

PURPOSE

A three-plane anniversary scene. A nested heart arches over two cups and a shared cake, with paired flowers and a low ribbon in front.

DRAWING FACTS

Three connected 160 mm wide layers each have a 12 mm bottom tab. The separate 176 x 120 mm base marks stations for front, middle and back layers.

MATERIALS

Plain paper for a trial, ruler, scissors, blunt scoring tool and paper adhesive.

USE

Print at actual size and check the 50 mm bar. Cut outer contours only. Fold each dashed bottom tab backward. Attach the tabs at the marked base stations, front to back.

CHECK

Confirm each layer stands upright and the tabs are secure before display. Front flowers partly cover the cups, and the ribbon partly covers the cake base. Keep paper pieces away from young children and heat.

50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.