
Christmas-tree favor box

gif-167 / LETTER / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

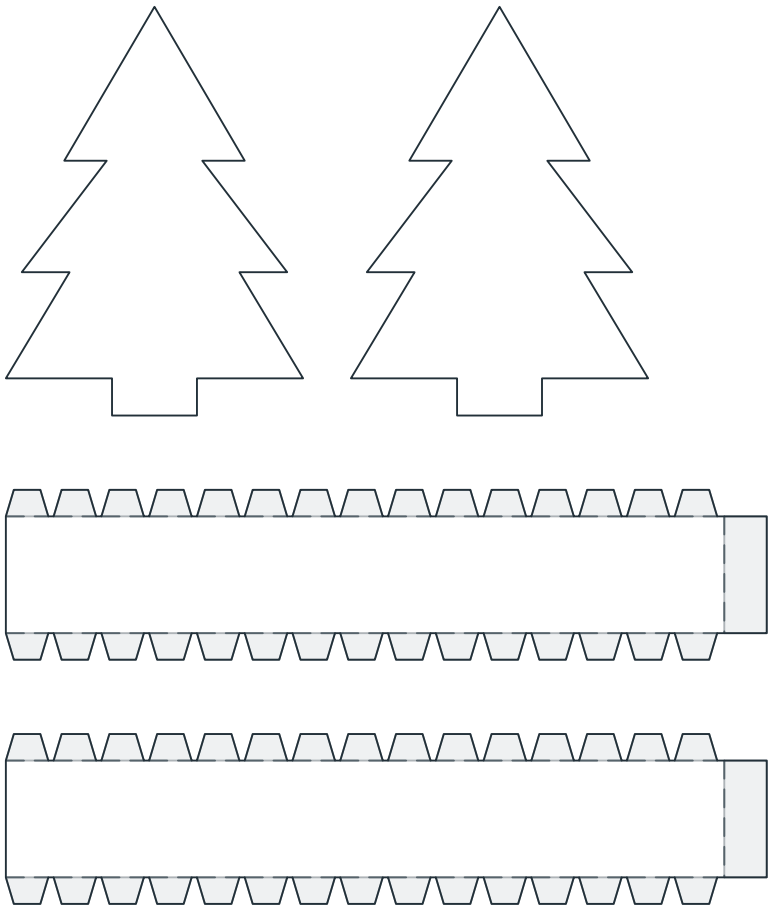

1. Two matching faces and wall bands - page 2

One actual-size pattern sheet: two faces, two wall bands and their tabs.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Keep this reduced overview beside page 2. Pages 3-4 explain permanent closure.


50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.


Christmas-tree favor box

gif-167 / LETTER / Pattern 1


Body face

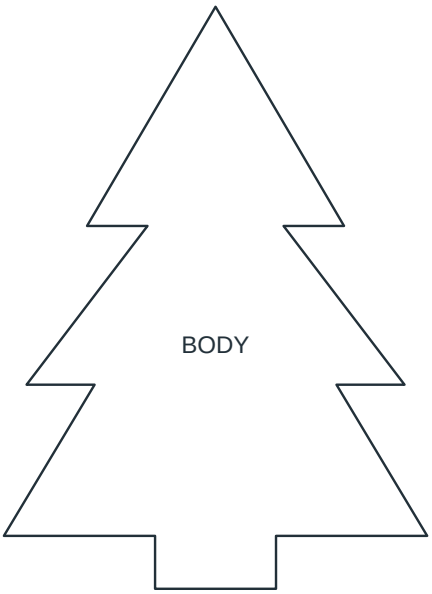


Back face

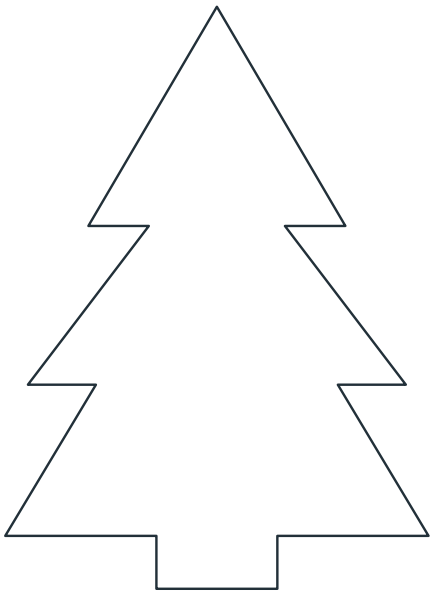


Body wall band 1/2

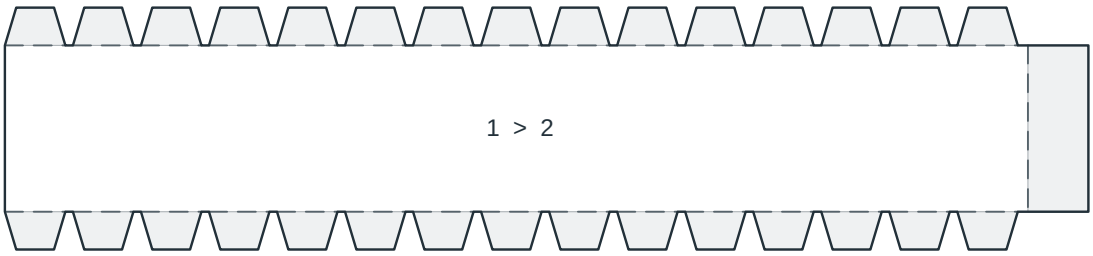

Body wall band 2/2

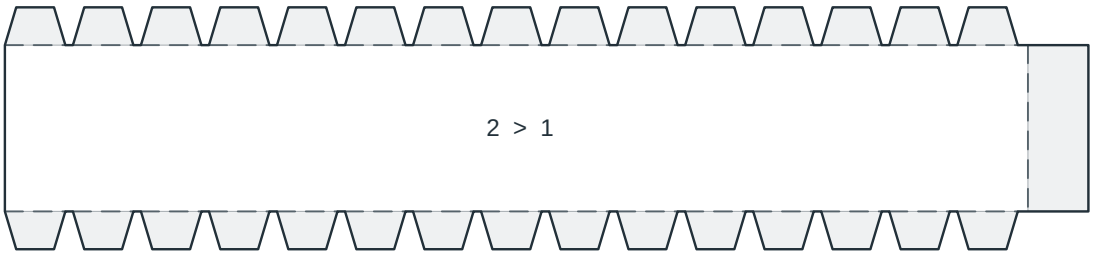



Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Christmas-tree favor box

gif-167 / LETTER / Instructions

PERMANENT-CLOSURE TREE BOX

Page 2 is the only actual-size cutting sheet. Page 1 is reduced; page 4 is a diagram, not a cut pattern. This box has two matching faces and a glued final face, with no opening lid.

DRAWING FACTS AND MATERIALS

Each face is 56 x 77 mm. The traced outline is 270.680 mm; wall depth is 22 mm. Use ordinary paper or card, a ruler, scissors, a blunt scoring tool and a small amount of paper adhesive. An adult may help with cutting and scoring.

1 / CUT AND SCORE

Cut both faces and both numbered wall bands on their solid outside boundaries, keeping every small tab and both 8 mm end seams. Score only the printed dashed tab hinges. Do not cut the hinges or add internal cuts.

2 / JOIN BAND 1 TO BAND 2

Overlap one 8 mm end seam in the printed 1 > 2 order. The two joined bands are one wall strip. Keep the second 8 mm seam free until the strip has wrapped once around a face.

3 / FOLLOW THE EXACT OUTLINE

Start at the lower-left outer base corner of the first face (the dot on page 4). Follow the arrow toward the trunk, then around the whole outline. Crease the 22 mm wall at each actual outline corner as you align it; these corner creases are not additional printed score lines.

4 / TABS BEHIND THE FIRST FACE


Fold one row of tabs inward, behind the first face. Align the wall edge to its outline without stretching. Close the remaining 8 mm overlap seam to complete the loop, then glue those tabs behind the face. Both overlap seams belong to the wall, not the face.

5 / FILL BEFORE FINAL CLOSURE

Let the joins set. If using a favor, check its fit before gluing the second face. Keep the second face in the same orientation as the first, fold the remaining tab row behind it and glue it on last. This permanently closes the box; it is not a lift-off lid.

CHECKS AND LIMITS

Measure the 50 mm reference and the named face dimensions. Check the 1 > 2 order, both 8 mm overlaps, all corner alignment and both inward tab rows. Paper thickness and fold accuracy affect fit; drawing dimensions are not a physically tested capacity, strength or closure claim.




Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.

Christmas-tree favor box

gif-167 / LETTER / Exploded diagram - NOT A CUT PATTERN

EXACT-NET WRAP / EXPLODED DIAGRAM

Diagram only - not a cut pattern. Both faces keep the same orientation. The wall follows every original face edge; its 22 mm depth is shown between the face planes.

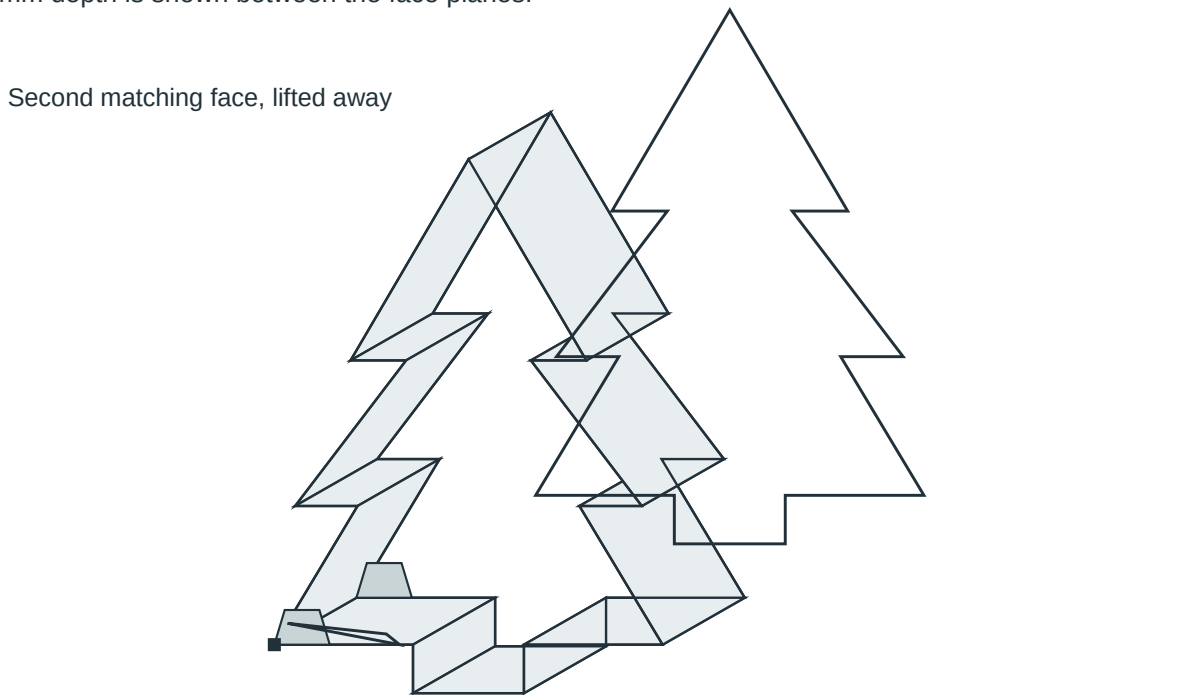




Band diagram only: join 1 > 2, then close 2 > 1 after wrapping.

ONE LOOP, TWO OVERLAP SEAMS

Two bands: 143.340 mm each including an 8 mm end seam. Join 1 > 2 with one 8 mm overlap, wrap the full 270.680 mm outline, then close 2 > 1 with the second 8 mm overlap. 286.680 - 8 - 8 = 270.680 mm.

TABS AND FINAL FACE

The shaded examples indicate tabs folded behind the faces; every small native tab remains on page 2. Crease the wall where the exact outline turns. Fill before attaching the second face. Both faces align in the same orientation; the second is permanently glued, with no opening lid.

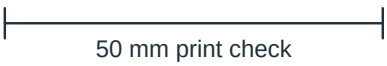

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.