
Straight-flap envelope

100 x 65 mm back / solid: cut / dashed: fold

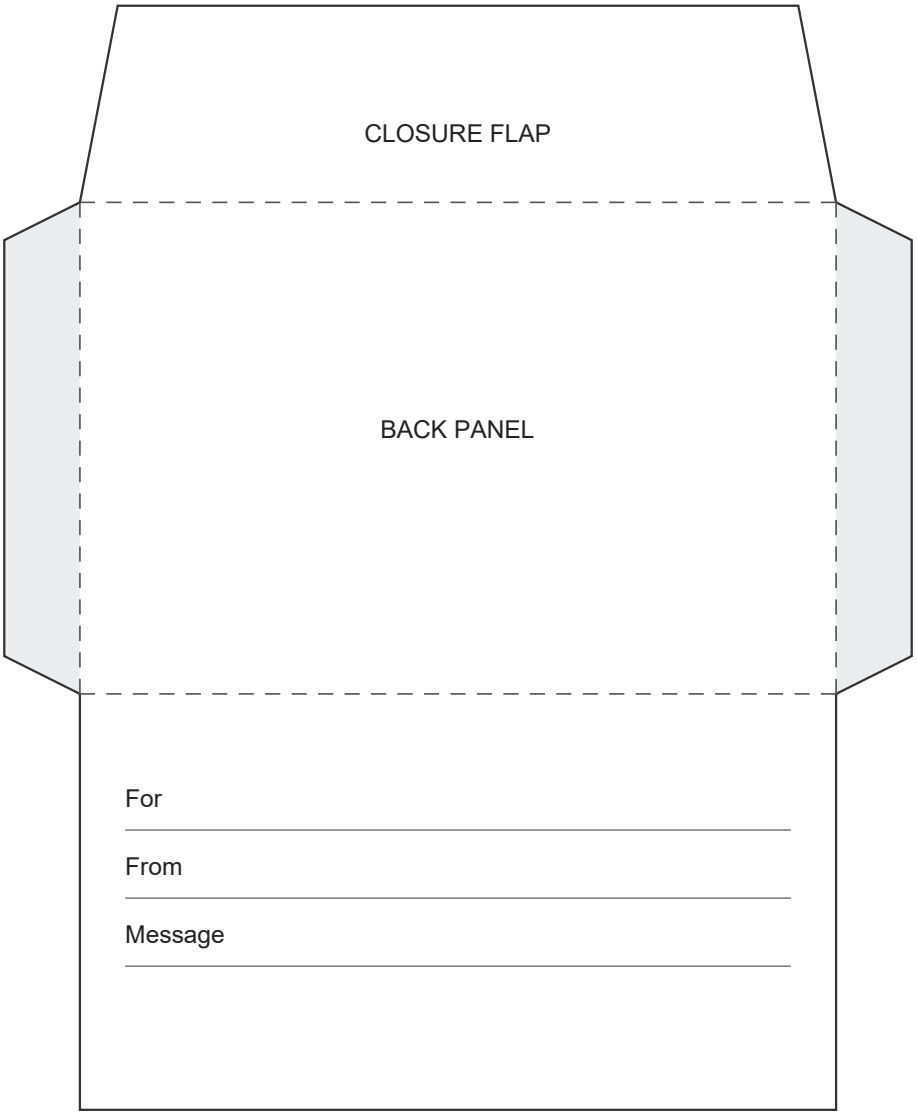

Gray side tabs = glue only after the dry-fold check.


See page 2 for the order and finished-pocket view.

50 mm scale check | Measure after printing

Straight-flap envelope


Assembly guide / use with the matching net on page 1

FOLD SEQUENCE / SCHEMATIC, NOT A CUT PATTERN

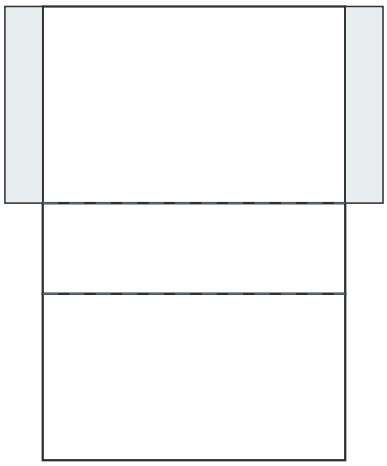

SHADE = SIDE GLUE TABS

Fold tabs in, then front up.

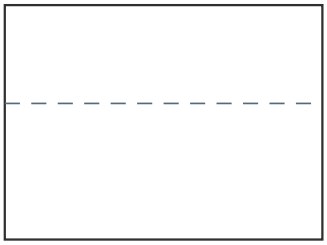

FINISHED POCKET / TOP OPEN

01 / PREPARE

Print at actual size. Measure the 50 mm line. Write on the front while flat.

02 / CUT

Cut only the solid outside contour. Keep both side tabs and the closure flap.

03 / CREASE

Place printed side down. Crease four dashed lines, then fold the side tabs inward.

04 / DRY-FIT

Fold the lower front up over the tabs. Check that the top opening stays clear.

05 / JOIN

Glue each shaded side tab to the front only. Press and let both seams dry.

06 / TRY CONTENTS

Trial a light note, then fold the top flap. Nominal 100 x 65 mm is not usable interior size.

50 mm scale check | Measure after printing