
Pointed-flap envelope

Solid: cut / dashed: fold / assembly guide on page 2

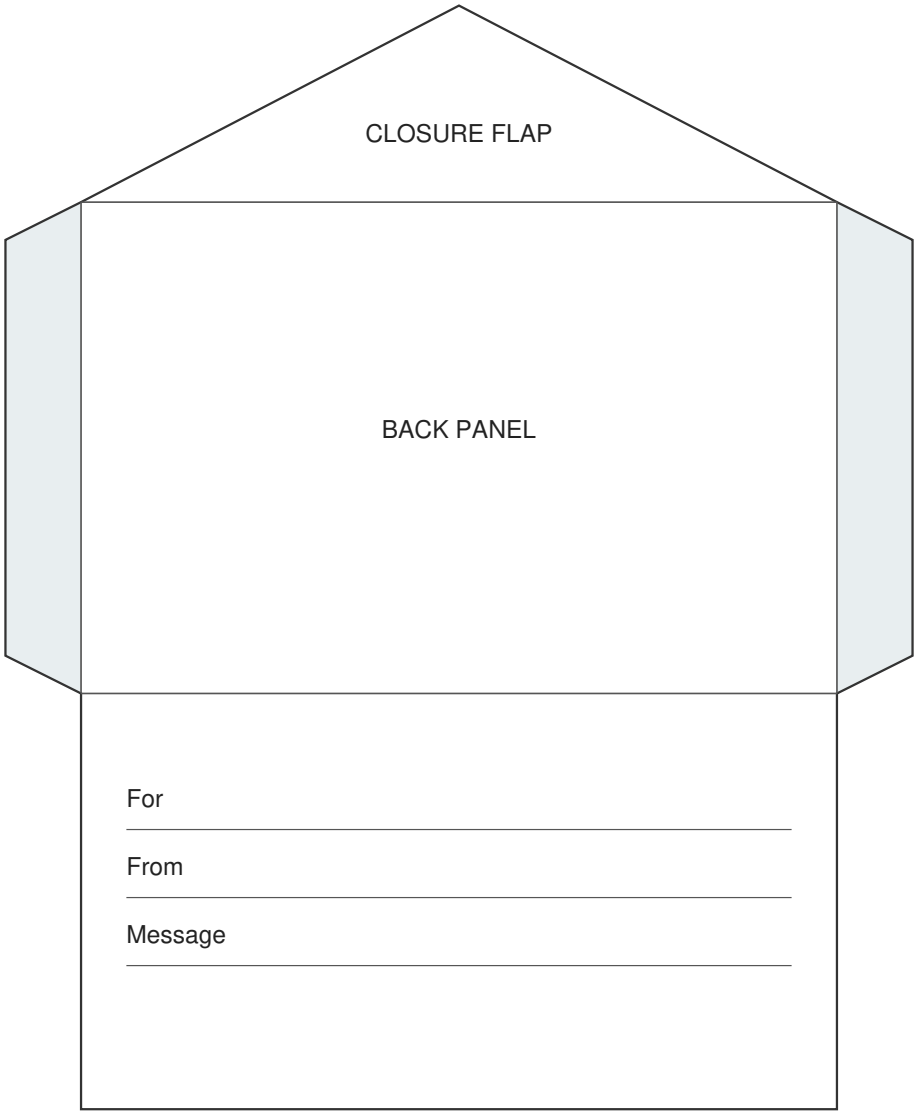

Gray side tabs = glue only after a dry-fold check.


See page 2 for the finished-pocket view and sequence.

50 mm scale check | Measure after printing

Pointed-flap envelope

Assembly guide / use with the matching net on page 1

FOLD SEQUENCE / SCHEMATIC, NOT A CUT PATTERN

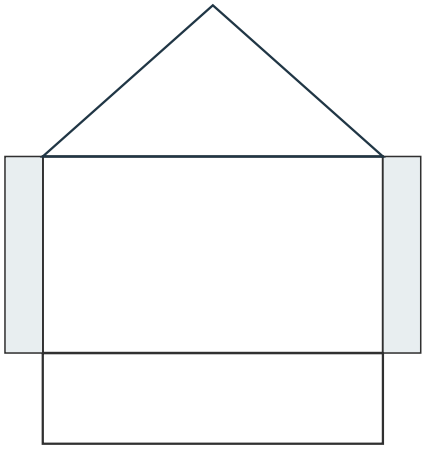

SHADE = SIDE GLUE TABS

Fold front up; top stays open.

Closure flap folds last.

01 / PREPARE

Print at actual size; measure the 50 mm line. Fill For, From and Message while the sheet is flat.

02 / CUT

Cut only the solid outside contour. Keep both side tabs, the front panel and the closure flap. Dashed lines are folds.

03 / DRY-FOLD

Place printed side down. Crease four dashed lines; fold both 10 mm side tabs inward, then bring the 55 mm front up over them.

04 / JOIN

Glue each shaded side tab to the front only. Press and dry both seams; leave the top opening and closure flap free.

05 / CHECK POCKET

The back panel is 100 x 65 mm; folds reduce usable space. Trial the intended light item without forcing seams.

06 / CLOSE

After the seams dry, fold the 26 mm pointed closure flap over the opening and secure with a removable seal or small tape piece.

50 mm scale check | Measure after printing