
Bookmark sleeve

Solid: cut / dashed: fold / assembly guide on page 2

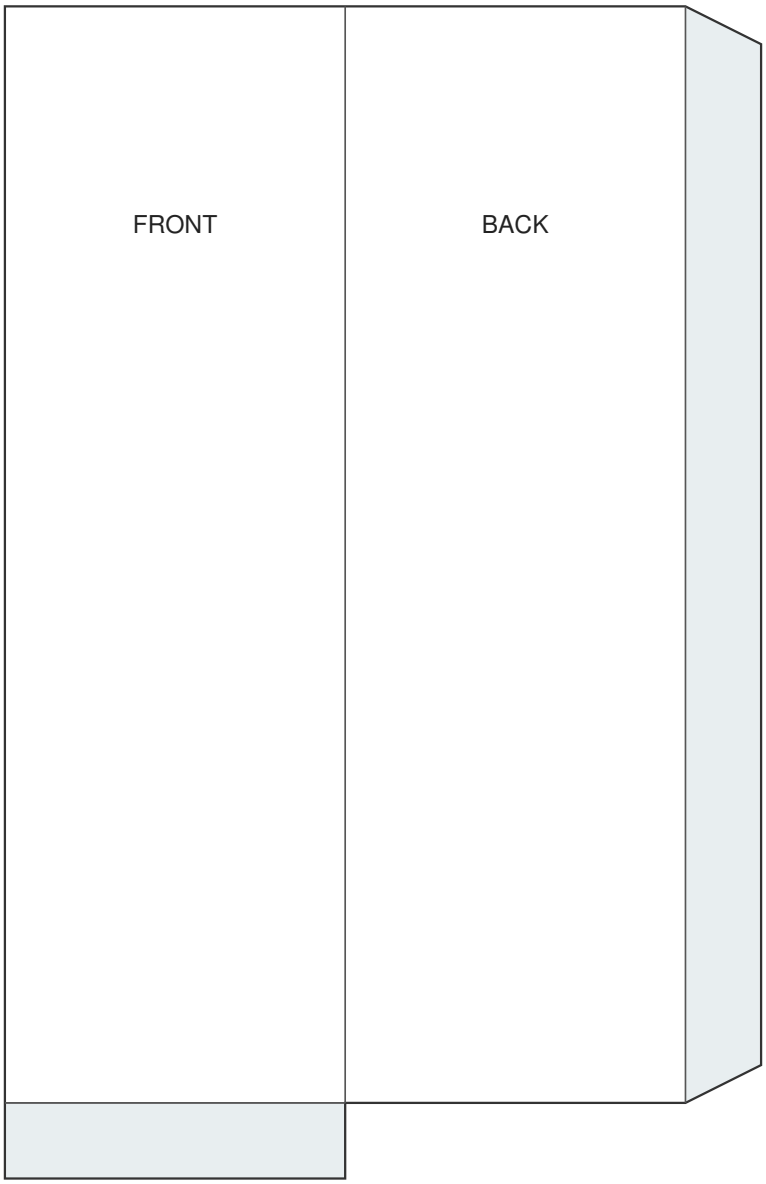


Gray areas are joins. Keep the top open; see page 2.

50 mm scale check | Measure after printing

Bookmark sleeve

Assembly guide / use with the matching net on page 1

FOLD SEQUENCE / SCHEMATIC, NOT A CUT PATTERN

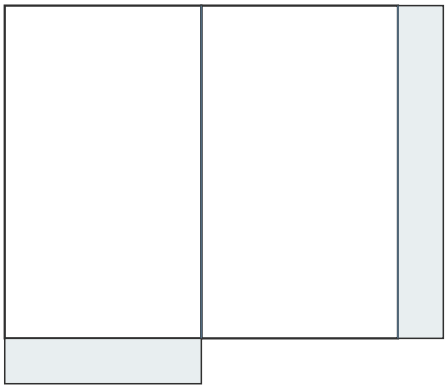

FRONT + BACK

SHADE = SIDE + BOTTOM TABS

Top stays open.

01 / PREPARE

Print at actual size; measure the 50 mm line. Trial a spare sheet and the intended bookmark before making more.

02 / CUT

Cut only the solid outside contour. Keep the narrow side tab and bottom tab attached. Dashed lines are folds.

03 / DRY-FOLD

Crease three dashed lines. Fold FRONT over BACK at center with the printed faces outside; wrap the side tab behind FRONT.

04 / JOIN

Glue the shaded 10 mm side tab to the back of FRONT. Fold the shaded 10 mm bottom tab around the lower edge onto BACK and glue it.

05 / CHECK FIT

The nominal panels are 45 x 145 mm. Folds and stock reduce usable space; slide the intended bookmark in from the open top without forcing seams.

06 / FINISH

Leave the top open. Let both joins dry before inserting the bookmark. Check that it can be removed without pulling a seam.

50 mm scale check | Measure after printing