
Flat gift pouch

Solid: cut / dashed: fold / assembly guide on page 2

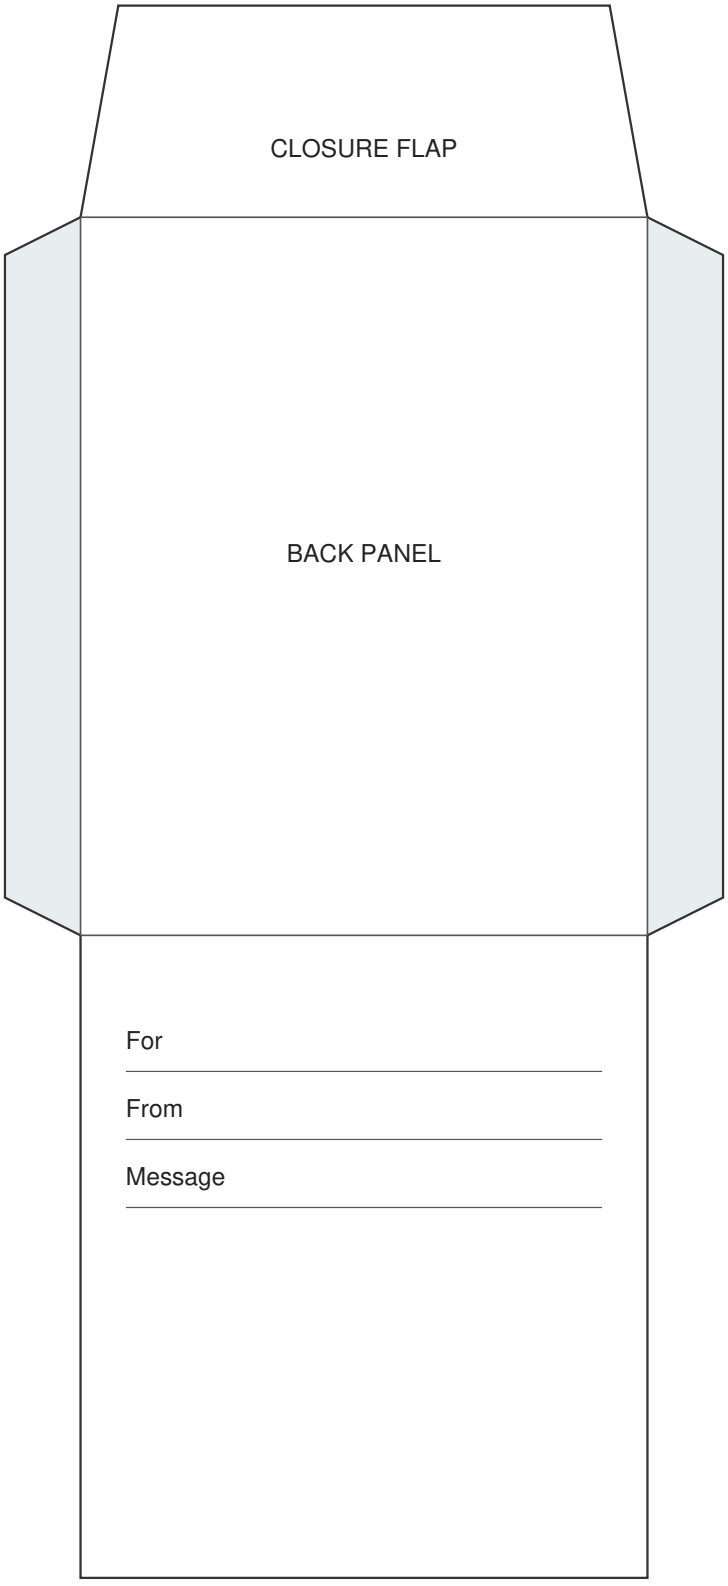


50 mm scale check | Measure after printing

Flat gift pouch


Assembly guide / use with the matching net on page 1

FOLD SEQUENCE / SCHEMATIC, NOT A CUT PATTERN

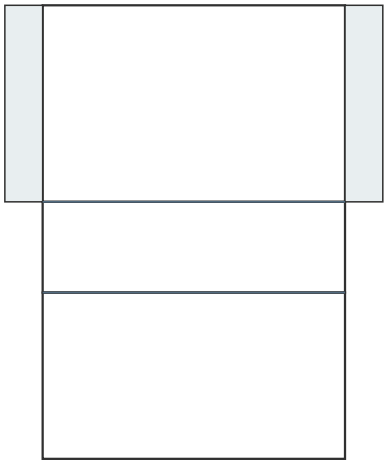

SHADE = SIDE GLUE TABS

Fold tabs in, then front up.



FINISHED POCKET / TOP OPEN

01 / PREPARE

Print at actual size; measure the 50 mm line. Write on the front while flat. Trial a spare sheet first.

02 / CUT

Cut only the solid outside contour. Keep both side tabs, the front panel and the closure flap. Dashed lines are folds.

03 / DRY-FOLD

Place printed side down. Crease four dashed lines; turn both 10 mm side tabs inward, then bring the 85 mm front up over them.

04 / JOIN

Glue only where each shaded side tab meets the front. Let the seams dry. Leave the top opening and closure flap free.

05 / CHECK FIT

The back panel is 75 x 95 mm; folds reduce usable space. Trial the intended dry, lightweight item without forcing a seam.

06 / FINISH

Insert the item after the seams dry. Fold the top flap over the opening and use a removable seal or a little tape.

50 mm scale check | Measure after printing