
Drawer-and-sleeve gift box

BASE / shaded corner tabs join behind walls

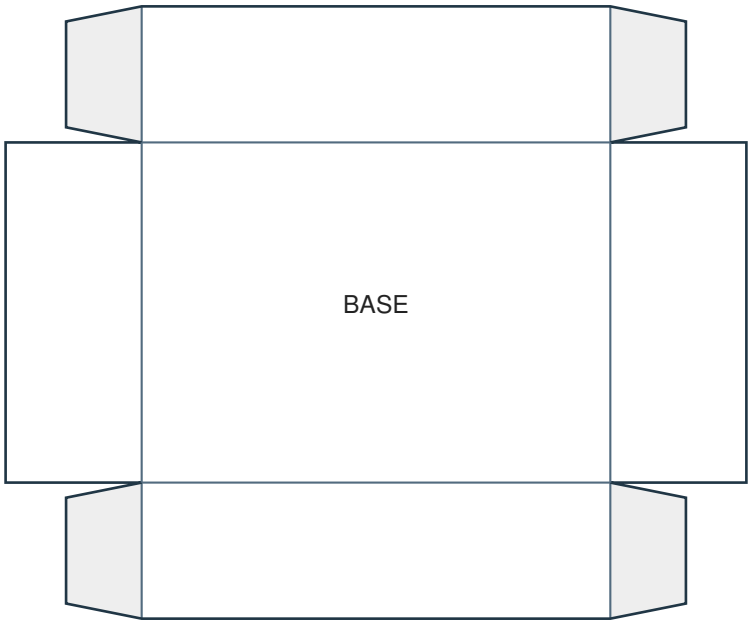

Base 62 x 45 mm; walls 18 mm. Keep all four tabs.


Cut the outer contour and crease the dashed lines.

Shaded corner tabs join behind neighboring walls.

50 mm scale check | Measure after printing

Drawer-and-sleeve gift box

SLEEVE / separate four-panel wrap, not a tray wall



Sleeve: 64.4 / 20.4 / 64.4 / 20.4 mm panels.


The 8 mm shaded seam joins the opposite sleeve edge.

50 mm scale check | Measure after printing


Drawer-and-sleeve gift box

Assembly guide / use both matching nets

FINISHED FORM / SCHEMATIC, NOT A CUT PATTERN

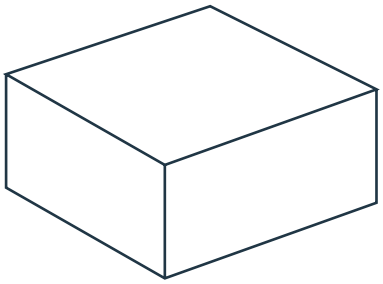

TRAY / four walls



SLEEVE / wraps tray

01 / PREPARE

Print both nets at actual size; measure each 50 mm line. Keep the tray and sleeve separate.

02 / TRAY

Cut the base contour. Crease the dashed base and tab lines; raise four walls with marks inside.

03 / JOIN TRAY

Glue four shaded corner tabs behind neighboring walls. Align top rims and let the tray dry.

04 / SLEEVE

Cut the sleeve rectangle. Crease four crosswise lines. Wrap four panels around the dry tray; glue only the shaded 8 mm seam behind the opposite sleeve edge.

05 / CHECK

Nominal sleeve panels are 64.4 x 20.4 mm, length 45.8 mm; tray base is 62 x 45 mm with 18 mm walls. Trial sliding fit on scrap without forcing it.

Paper thickness and adhesive affect fit; support from below.

50 mm scale check | Measure after printing