

Round-bottom cone favor pouch

gif-188 / LETTER / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

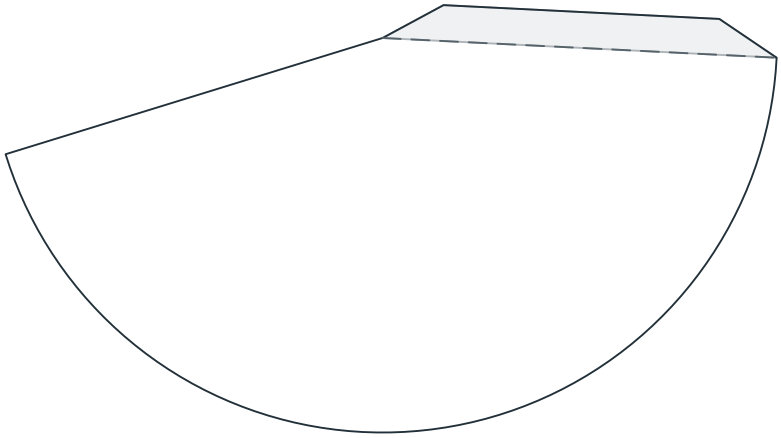

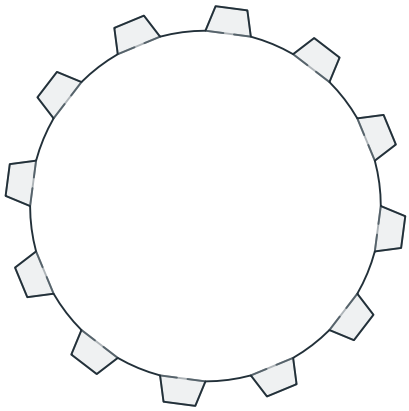

1. Pattern 1

1 pattern sheet supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.

50 mm print check


Print at actual size / 100%. Disable fit-to-page.

Use the paper edition that matches the printer tray.


Round-bottom cone favor pouch

gif-188 / LETTER / Pattern 1

Cone wrap

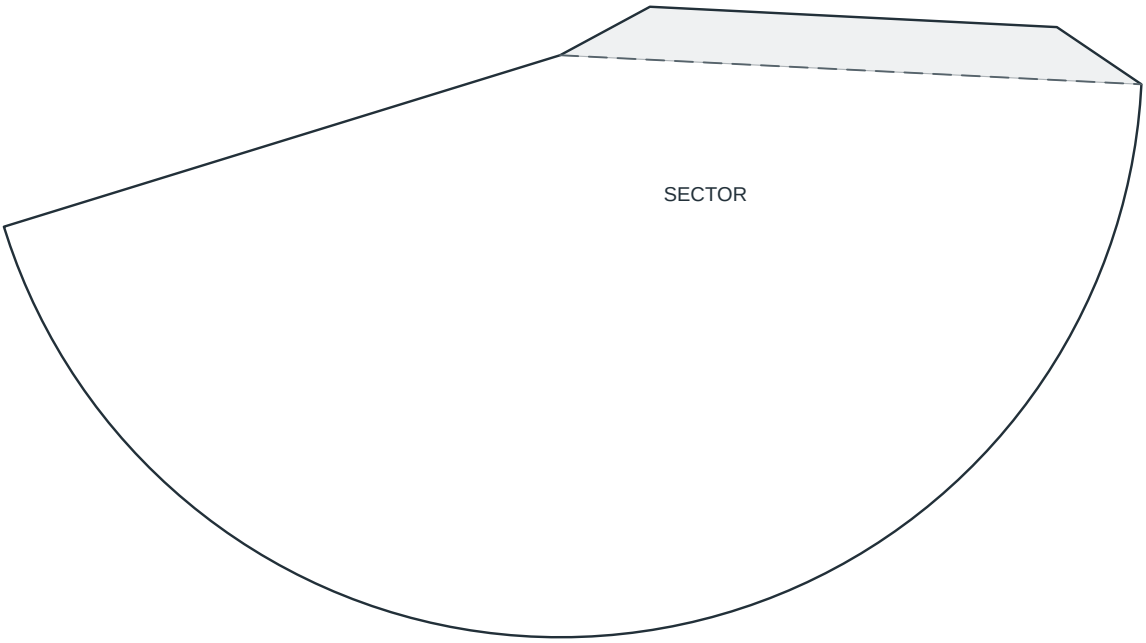

Round bottom disc - tabs turn into cone

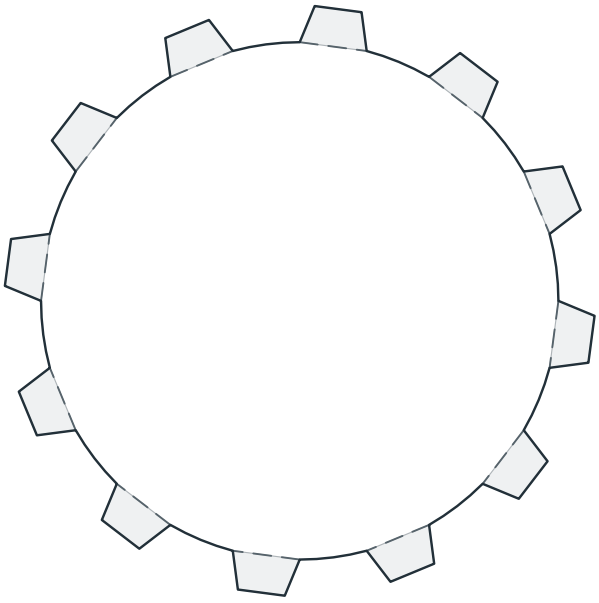

50 mm print check

Print at actual size / 100%. Disable fit-to-page.

Use the paper edition that matches the printer tray.

Round-bottom cone favor pouch

gif-188 / LETTER / Instructions

PURPOSE

Round-bottom cone favor pouch developed as a fixed-size paper pattern with separate cut, fold and joining marks. Use the stated drawing sizes and make an empty trial before choosing material or contents.

DRAWING FACTS

- Cone sector radius: 77 mm; angle 160 degrees; joining tab 7 mm.
- Ideal paper-surface cone: base diameter 68.44 mm and height 68.98 mm before material/adhesive effects.

MATERIALS

Plain paper for a first trial, a ruler, scissors and a blunt scoring tool; adult help for internal cuts.

HOW TO USE THESE PAGES

1. Cut the sector with its narrow seam tab attached. Gently curl the paper without creasing the curved surface flat.


2. Bring the plain radial edge over the shaded seam tab, aligning the point and curved rim endpoints. Glue this overlap and let it dry around a plain-paper trial former.

3. Cut the separate round disc with all twelve tabs attached. Score each tab hinge and turn the tabs upward.

4. After an empty trial, place a small dry, expendable favor inside the cone before closing the wide opening with the disc. Glue the disc tabs to the inside wall around the rim. Let the join dry before checking the base seam.

LIMITS AND CHECKS

- Nominal drawing dimensions are not a tested usable-capacity, load, mailing, food-contact or archival specification.
- Do not place valuable, wet, hot or breakable items in an unreviewed paper prototype.
- Trial: Measure the 50 mm reference and at least two named panel dimensions.
- Trial: Assemble an empty plain-paper trial; record closure, seam, clearance and material behavior.



50 mm print check

Print at actual size / 100%. Disable fit-to-page.

Use the paper edition that matches the printer tray.