
Paper seed pod forms


pap-053 / LETTER / Parts overview - NOT A CUTTING SHEET

USE THE FOLLOWING PATTERN SHEETS AT ACTUAL SIZE.

These miniature views identify the supplied patterns; they are deliberately reduced.

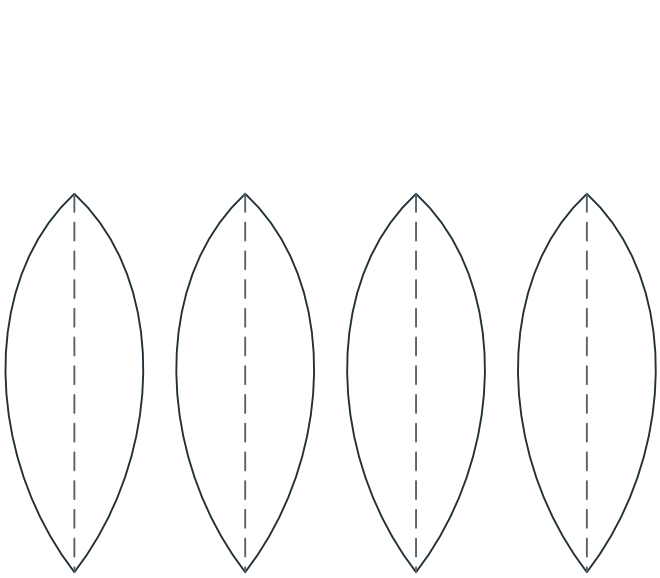

1. Pattern 1

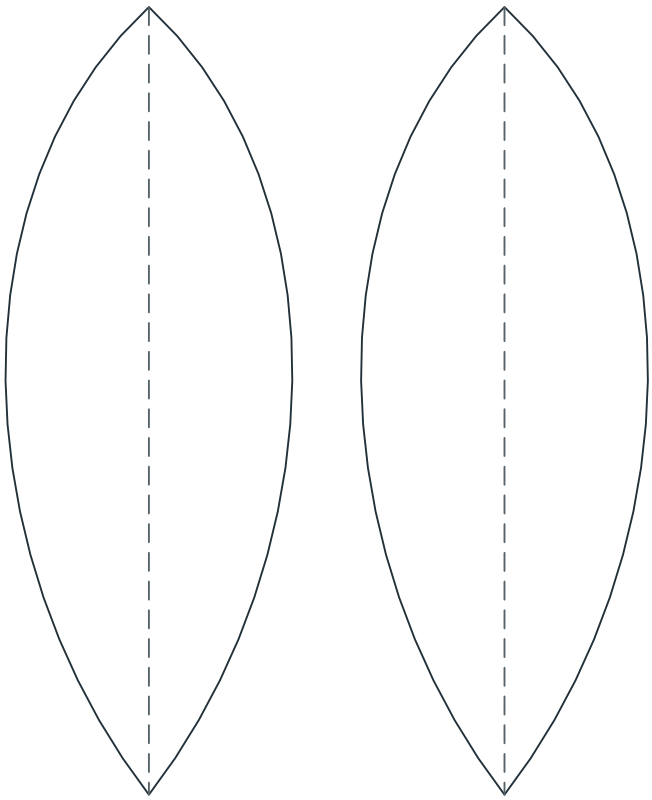

2. Pattern 2

2 pattern sheets supplied. Printed details are not cut lines unless explicitly marked.

Solid cut boundary / dashed score / shaded joining area. Read the full instructions.

Dry-fit the parts before gluing. Keep this overview beside the full-size pattern sheets.


50 mm print check

Print at actual size / 100%. Disable fit-to-page.
Use the paper edition that matches the printer tray.


Paper seed pod forms

pap-053 / LETTER / Pattern 1


Seed pod lobe 1

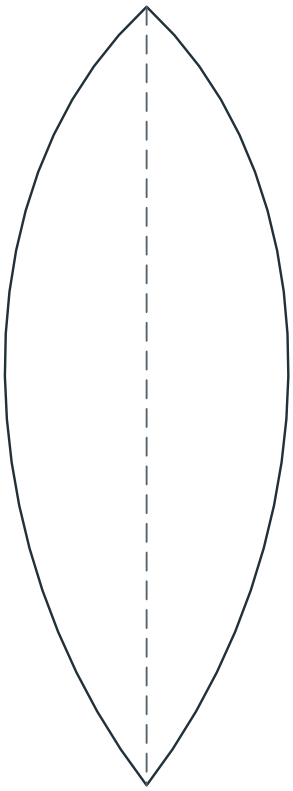


Seed pod lobe 2

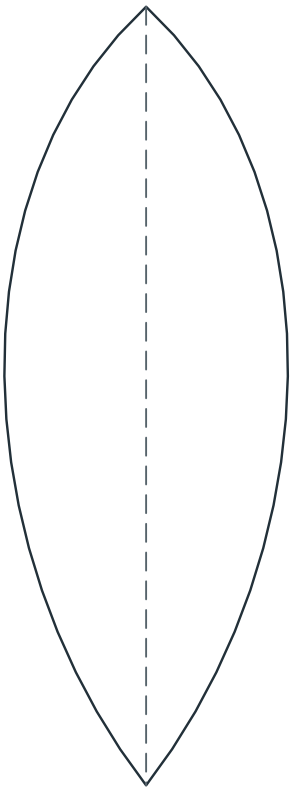

Seed pod lobe 3

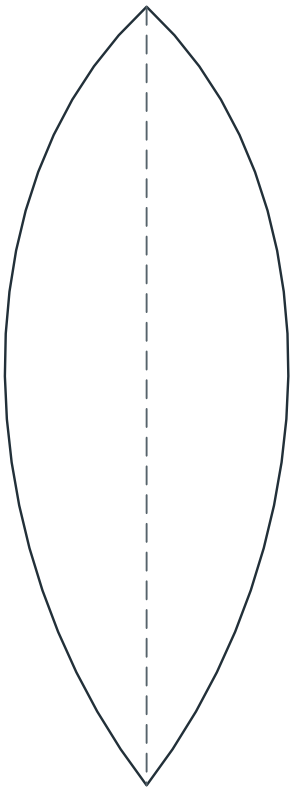

Seed pod lobe 4

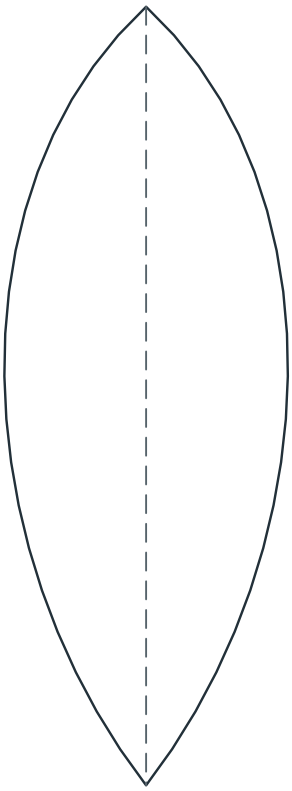

50 mm print check


Print at actual size / 100%. Disable fit-to-page.

Use the paper edition that matches the printer tray.


Paper seed pod forms

pap-053 / LETTER / Pattern 2

Seed pod lobe 5

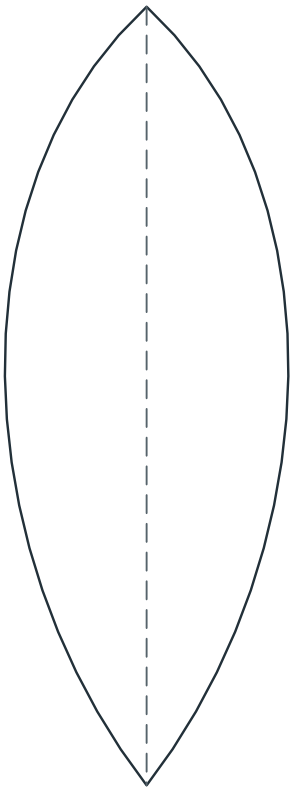

Seed pod lobe 6

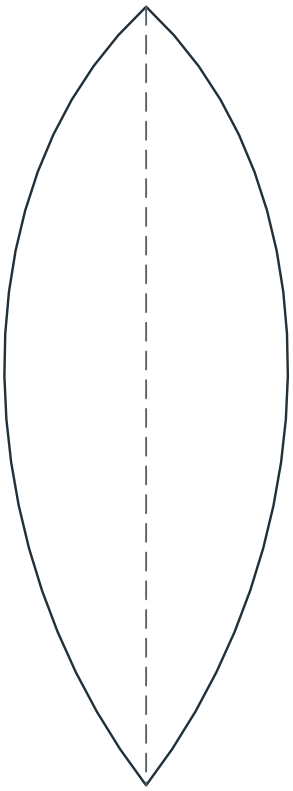

50 mm print check

Print at actual size / 100%. Disable fit-to-page.

Use the paper edition that matches the printer tray.

Paper seed pod forms

pap-053 / LETTER / Instructions

PURPOSE

Paper seed pod forms developed as a measured original paper study. The packet provides the actual parts, joining or shaping marks, drawing dimensions and an assembly sequence. Print at actual size and dry-fit the parts before gluing.

DRAWING FACTS

- Six 103 mm shaped lobes joined back-to-back along center folds.

MATERIALS


Plain 100 to 140 gsm paper for a first dimensional trial; approximately 160 to 220 gsm card only after confirming the folds. Use a ruler, suitable scissors, a blunt scoring tool and a small amount of paper adhesive. An adult should handle internal cuts, holes and small fasteners. Supply a separate short hanging thread.

HOW TO USE THESE PAGES

1. Cut six lobes and score their center folds.
2. Fold each lobe, then glue half of one reverse face to the matching half of the next.
3. Continue in order; attach a short hanging thread between the final faces only after checking attachment strength.
4. Close the remaining pair. Allow it to dry before separating the lobes into an open pod.

LIMITS AND CHECKS

- Drawing dimensions describe flat paper surfaces, not verified internal capacity, load strength, fit or material compatibility.
- No mailing, food-contact, archival, toy-safety, protective-wear or cutting-machine certification is supplied.
- Make a plain-paper trial first; paper thickness and fold accuracy can change the fit.
- Trial: Measure the 50 mm reference and two named component dimensions.
- Trial: Make a complete empty trial and document fold direction, joining order, collision, stability and any fragile features.
- Trial: Repeat the trial using your chosen paper. Check that every join holds and each moving part works freely before decorating.



50 mm print check

Print at actual size / 100%. Disable fit-to-page.

Use the paper edition that matches the printer tray.