
Long open-top bookmark sleeve net

One nominal 50 x 180 mm open-top sleeve. Single-sided printing.

Print at 100% / Actual size. Page 2: assembly order and glue faces.

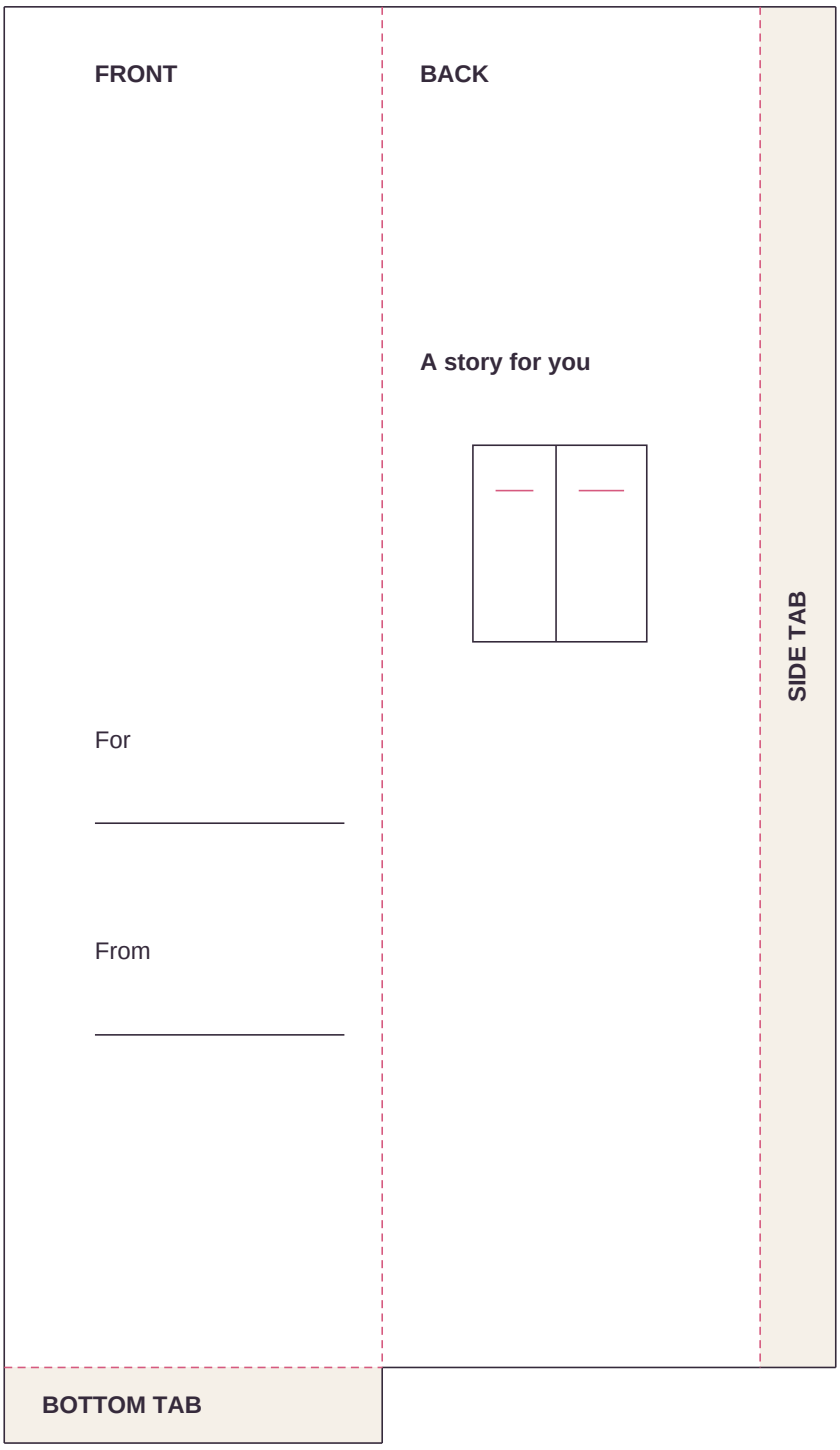


Solid: cut. Dashed: fold. Shaded tabs wrap onto the printed outside.

50 mm scale check - measure before cutting

Cut, dry-fold, join and use

Diagram only - use page 1 as the cutting sheet. Keep the top open.


Ideal plan view



40 x 170 mm bookmark

50 x 180 mm nominal panel

5 mm ideal margins; physical fit untested

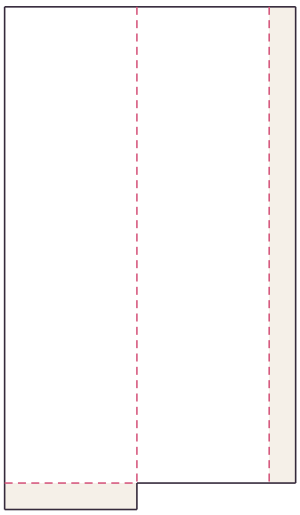

Print-side net: shaded tabs wrap to exterior

Top stays unjoined

1. Cut the solid outer contour; keep the side and bottom tabs. Never cut dashed folds.

2. Dry-fold the three dashed lines. Fold FRONT over BACK with printed faces outside.

3. Wrap the shaded side TAB behind FRONT. Glue the unprinted TAB face to the printed FRONT exterior at its 10 mm side contact zone. Keep adhesive outside the pocket.

4. Wrap the bottom TAB around the lower edge onto the BACK exterior. Glue its unprinted face to the printed BACK bottom contact zone. Do not glue the two broad inner faces together.

5. Keep the top open. Let joins dry. Trial the intended 40 x 170 mm bookmark without forcing it.

6. If it catches, stop. Paper thickness and folds reduce usable space; nominal 50 x 180 mm panels do not guarantee physical fit.

Paper adhesive, ruler, scissors and pen. Use printer-supported paper.